



Snom 360 / 370 Instructions

1. Making Calls


i. Outside Calls

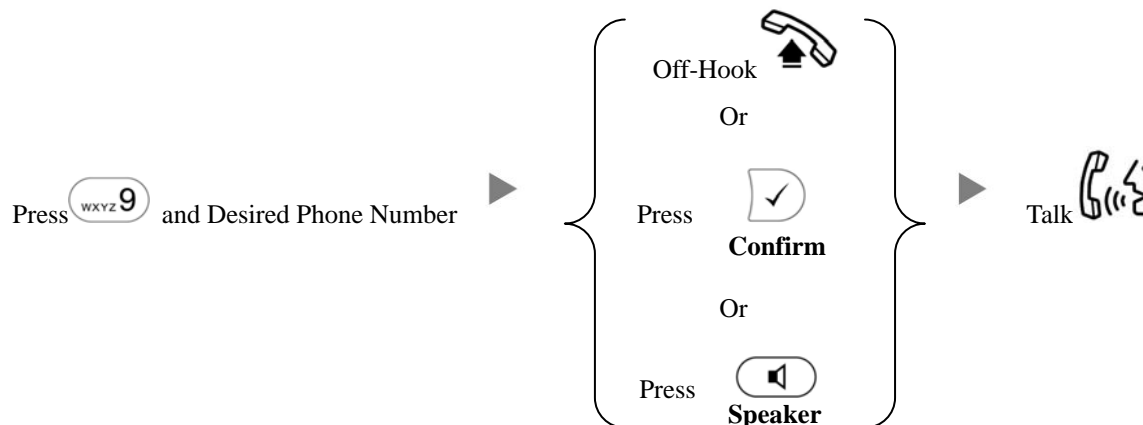

ii. Calling Other Extension

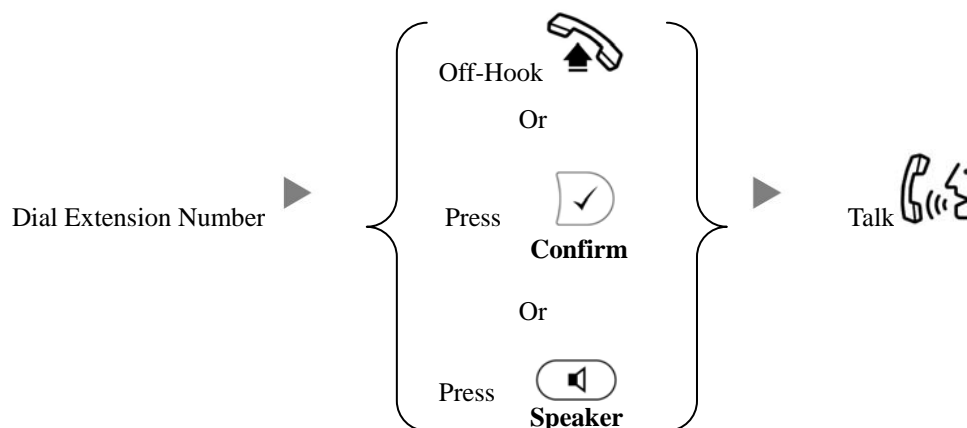

2. Answering Calls

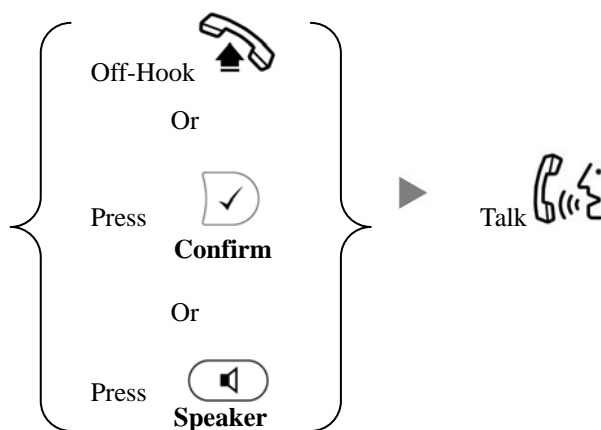


3. Transferring a Call / Call Transfer

i. Blind / Unattended Transfer



ii. Supervised / Attended Transfer

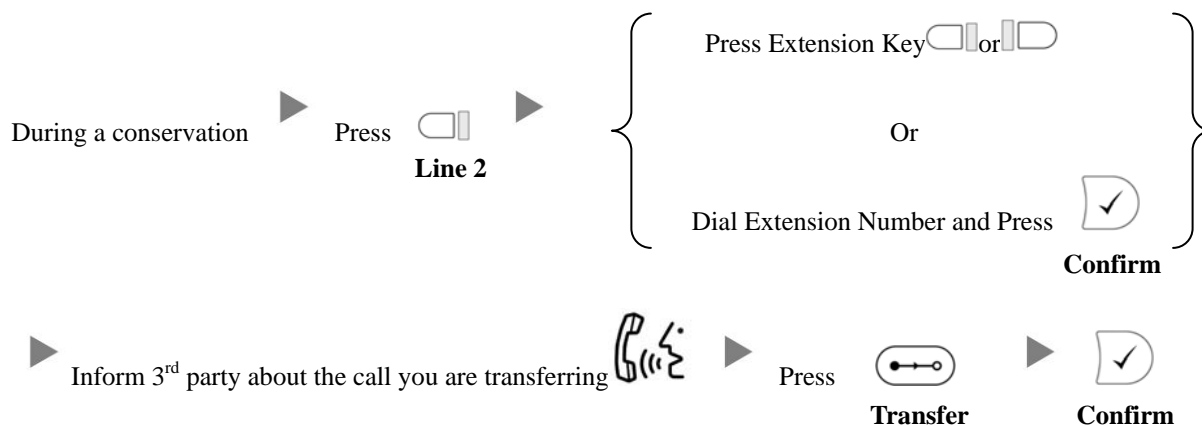


4. Holding a Call

i. To Hold



ii. To Retrieve a call (Call Hold retrieve)

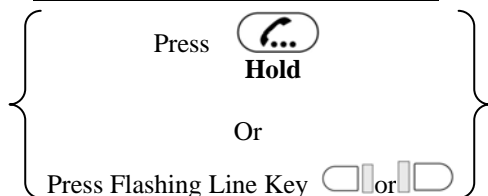


5. Holding in a System Parking Zone (Call Park)

i. To Hold




ii. To Retrieve a call (Call Park retrieve)

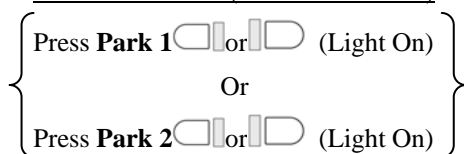


6. Making a conference (Conference Call)

 
i. To Establish a Conference



 ii. To Leave a conference and talk to the original person



 
iii. To Leave a conference and talk to the 3rd person




iv. To Leave a conference



7. Checking Voice Mail

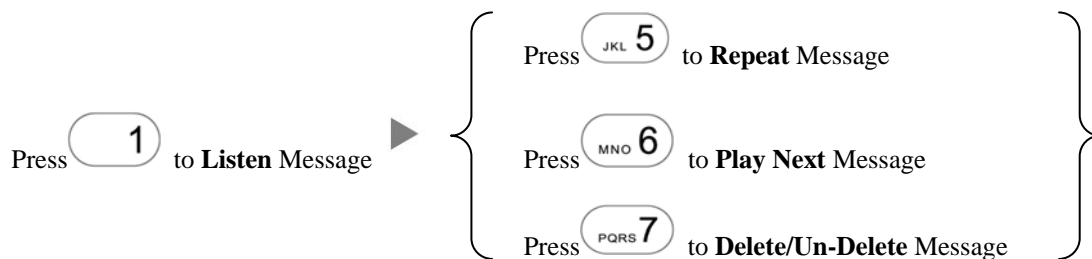


8. Checking Call History

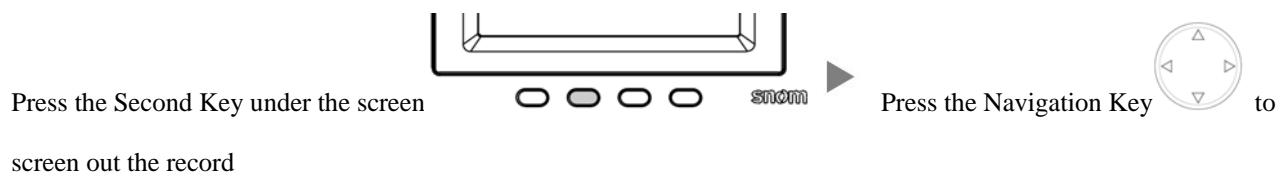


9. Forward Call


i. To set up All Call Forward Mode

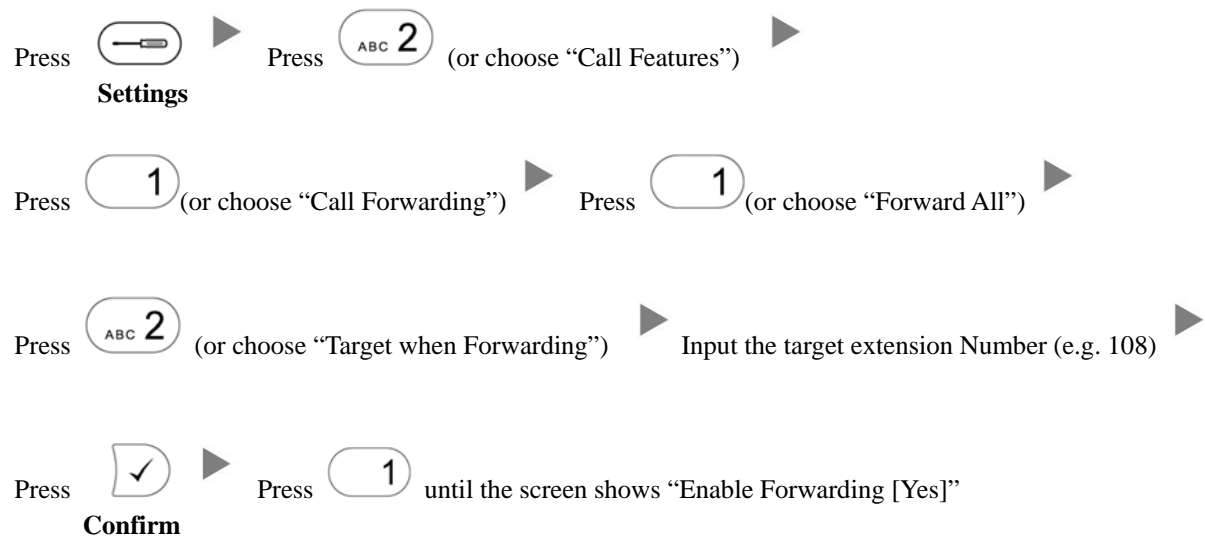


ii. To set up Busy Call Forward Mode

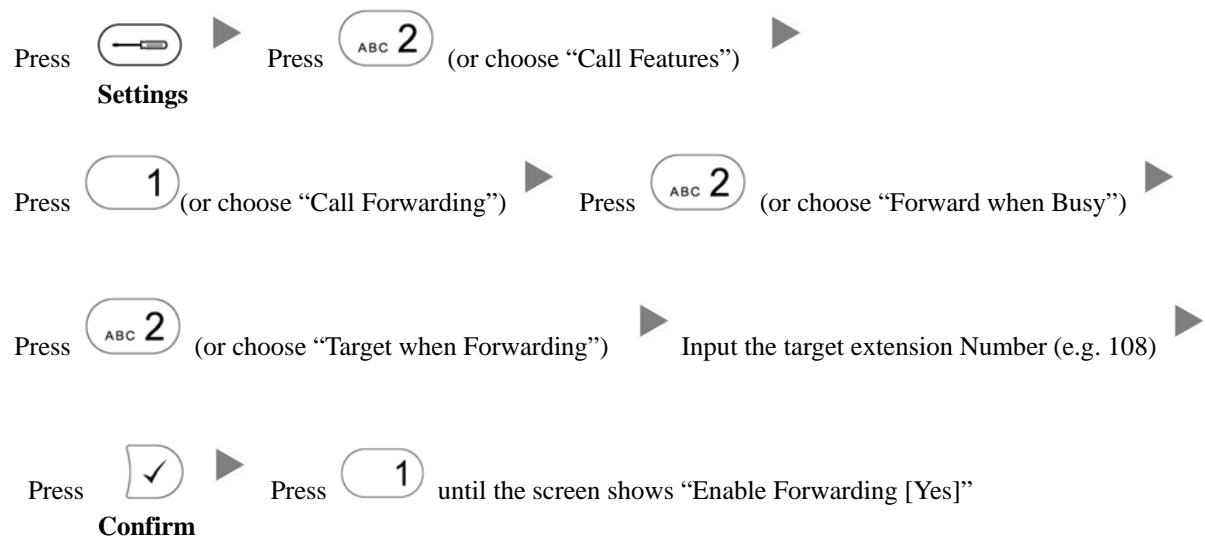

iii. To set up No Answer/Timeout Call Forward Mode

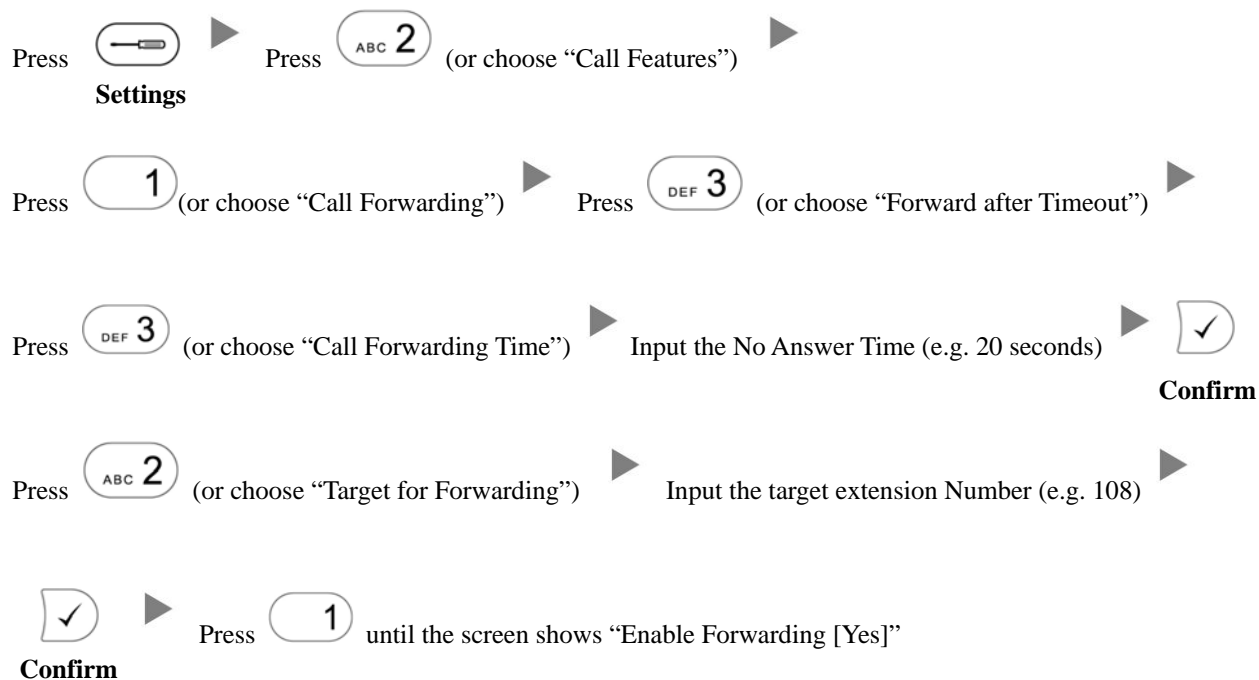

iv. To Cancel Call Forward

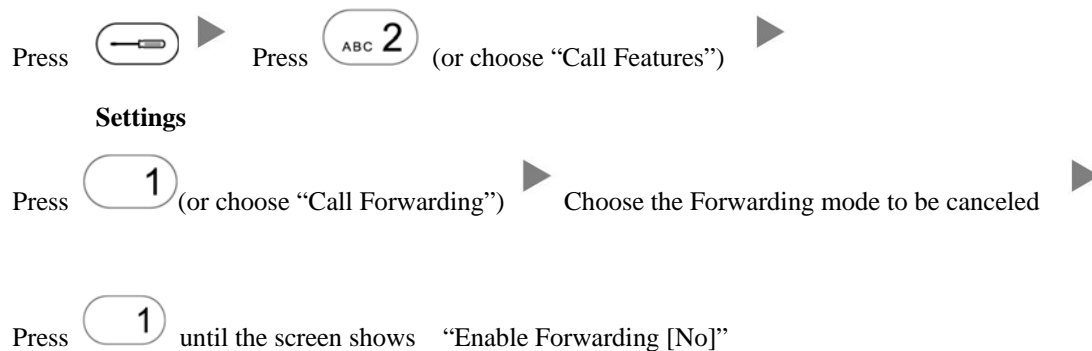

10. Address Book

