



Snom 760 Instructions

1. Making Calls


i. Outside Calls

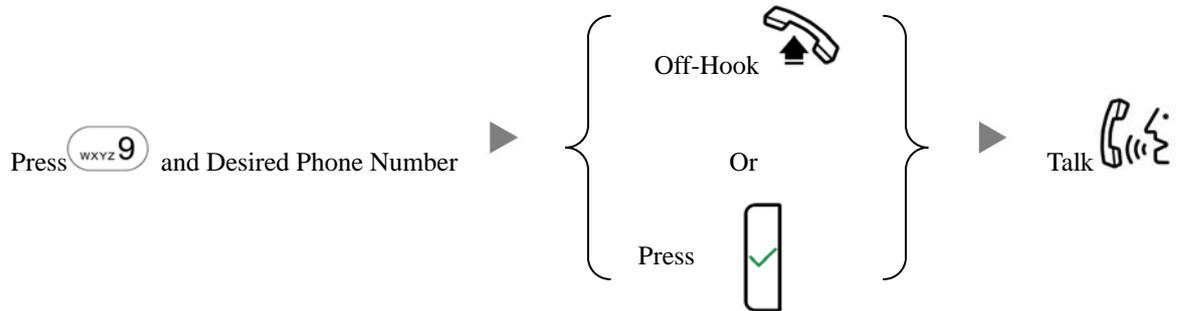


ii. Calling Other Extension

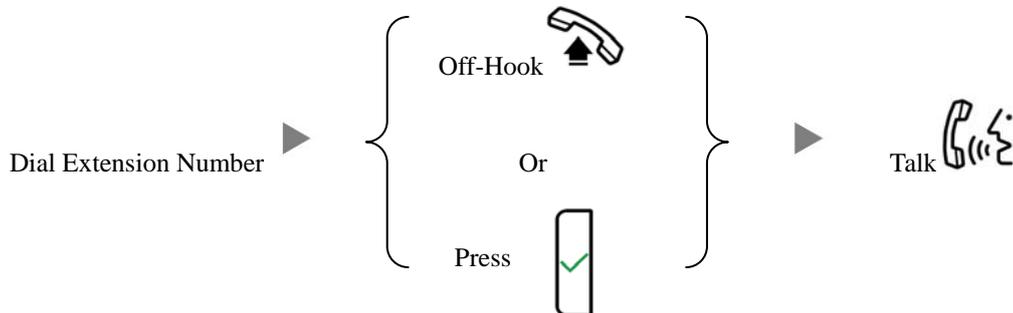

iii. Redial

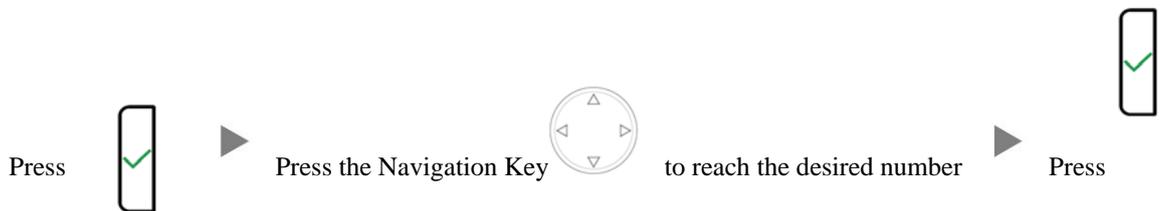


2. Answering Calls

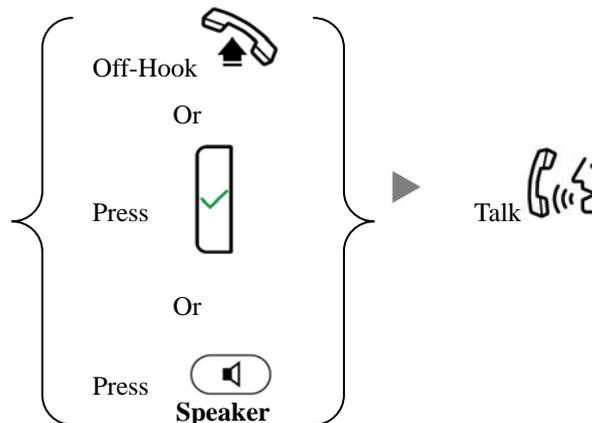


3. Transferring a Call / Call Transfer

i. Blind / Unattended Transfer

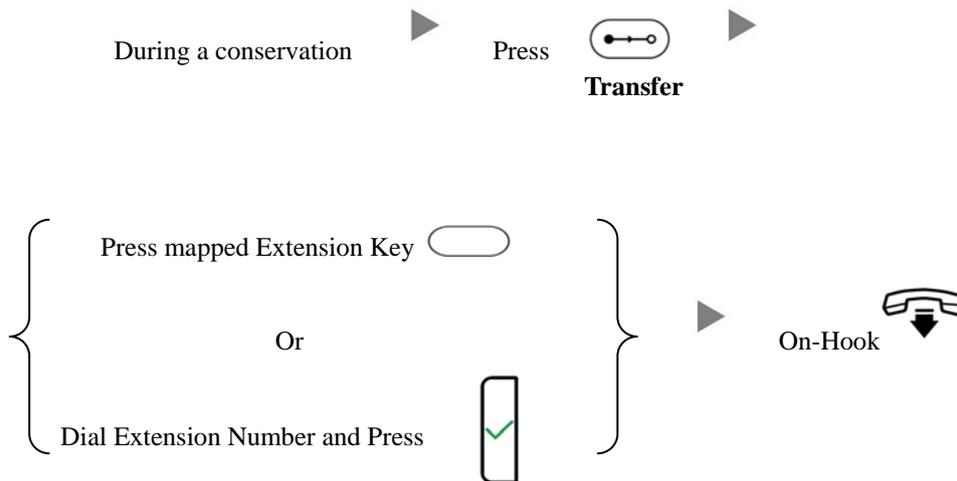

ii. Supervised / Attended Transfer

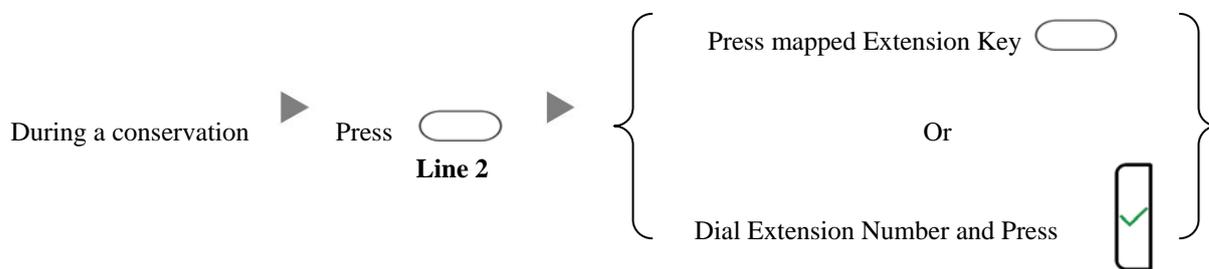

→ Optionally, you can Talk and Inform about the call you are transferring  →




4. Holding a Call

i. To Hold



ii. To Retrieve a call (Call Hold retrieve)

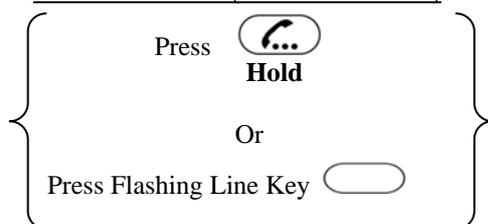


5. **Holding in a System Parking Zone (Call Park)**

i. To Hold




ii. To Retrieve a call (Call Park retrieve)

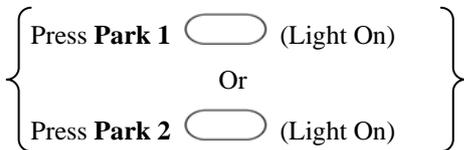


6. **Making a conference (Conference Call)**


i. To Establish a Conference

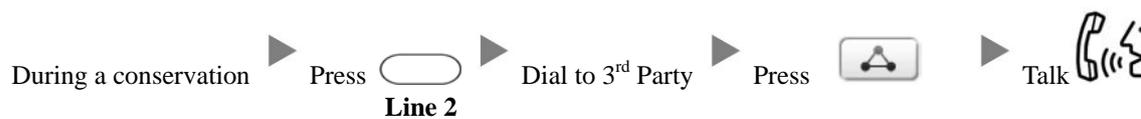


ii. To Leave a conference and talk to the original person

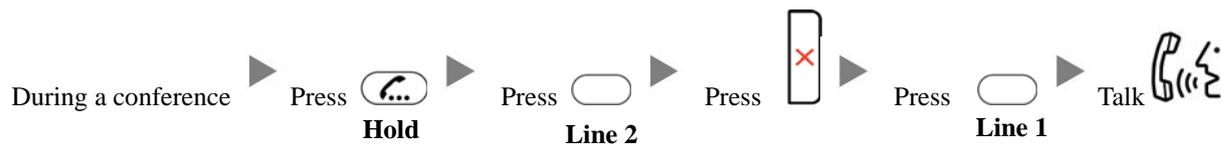

iii. To Leave a conference and talk to the 3rd person

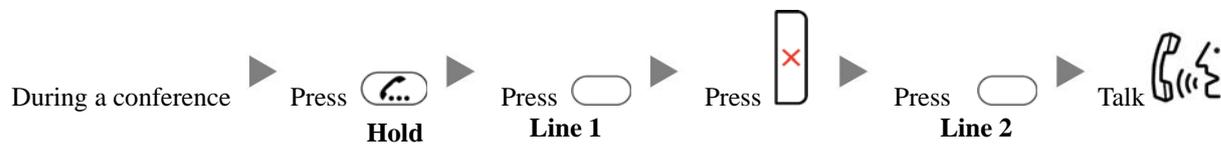

iv. To Leave a conference

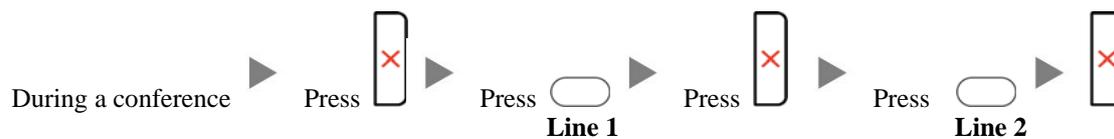

7. Checking Voice Mail

When message LED light is flashing ▶ Press  Message ▶ Enter Password

Press  to **Listen** Message ▶

- Press  to **Repeat** Message
- Press  to **Play Next** Message
- Press  to **Delete/Un-Delete** Message

8. Voice Mail Setup

Press  Message ▶ Enter Password (if any)

Press  to **Listen** Message ▶

- Press  to record **Unavailable** Message
- Press  to record **Busy** Message
- Press  to record **Your Name**
- Press  to record **Temporary** greeting
- Press  to **Change Password**

9. Checking Call History


Press the Second Key under the screen




▶ Press the Navigation Key  to screen out the record

10. Forward Call


i. To set up All Call Forward Mode

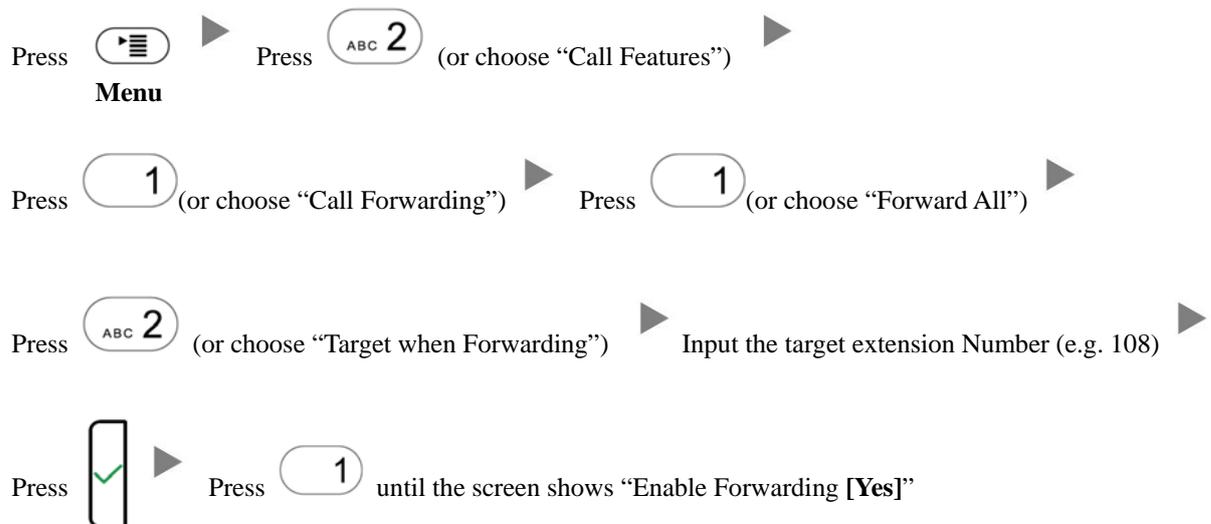


ii. To set up Busy Call Forward Mode

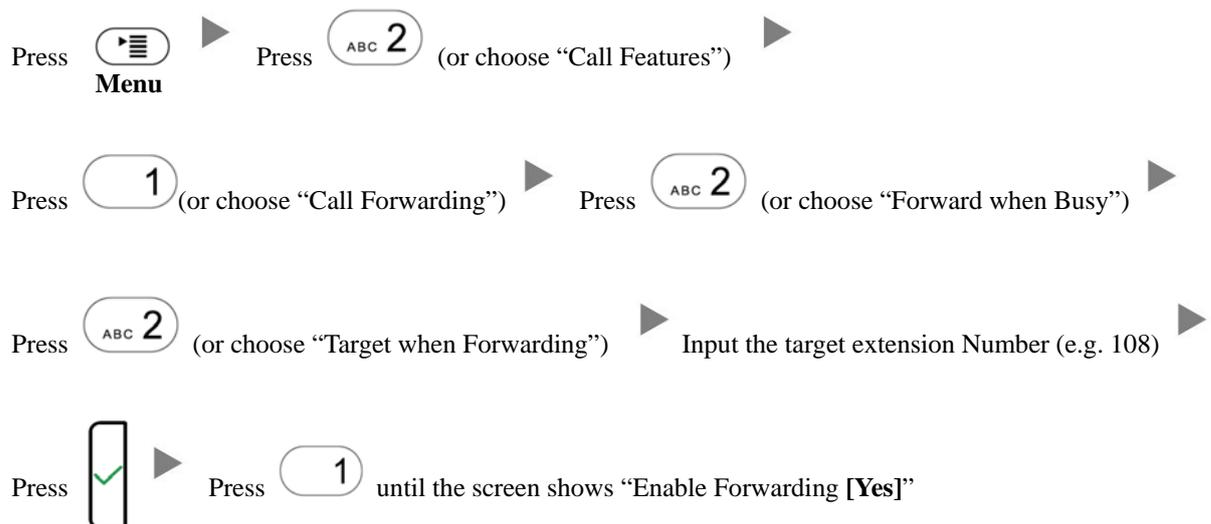

iii. To set up Time / No Answer Call Forward Mode

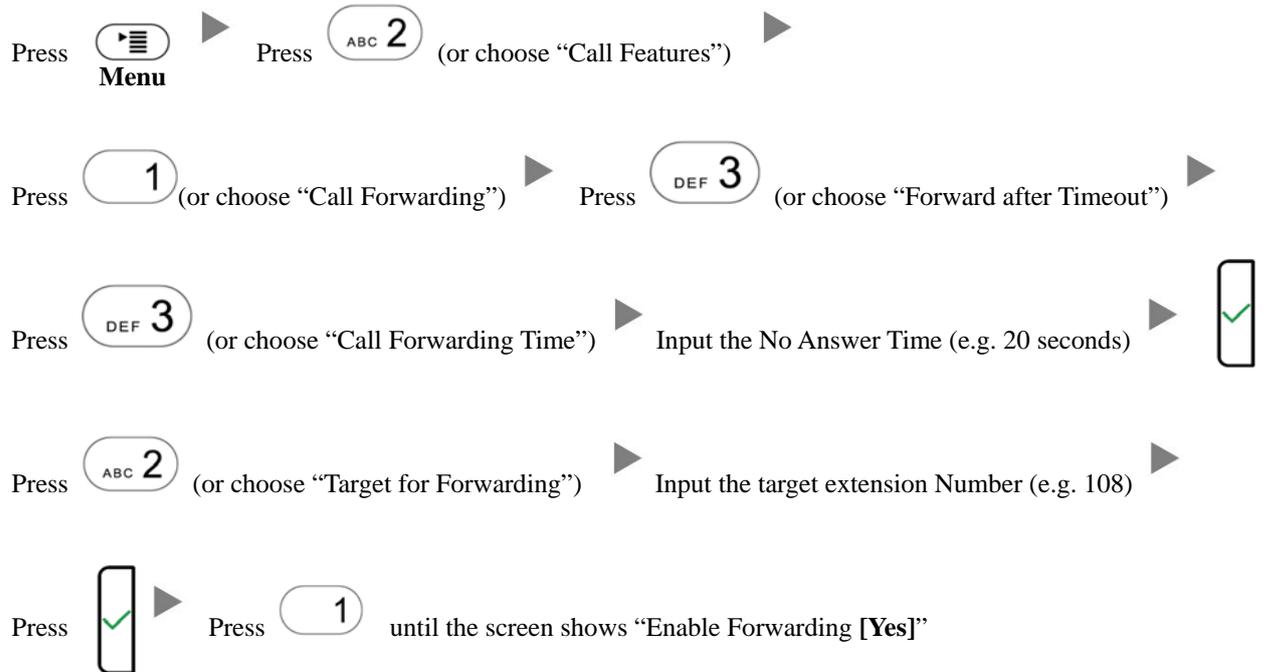

iv. To Cancel Call Forward

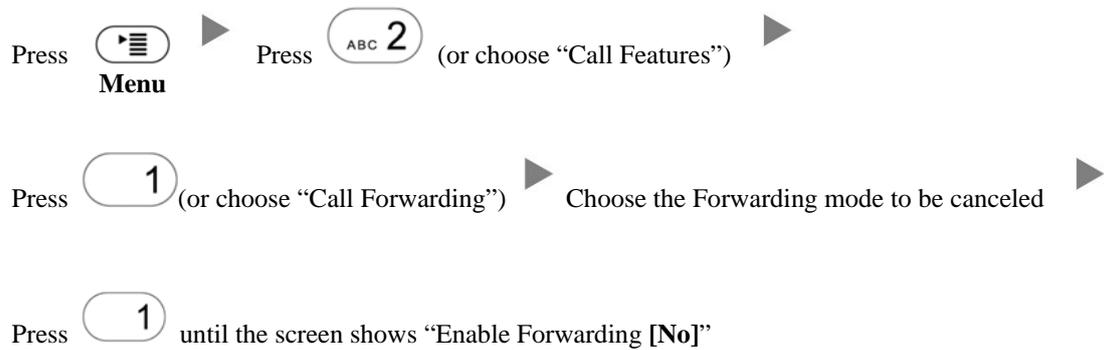

11. Address Book

